


UNINTERRUPTED POWER SUPPLY UPS-1210/8 125/4 125/1

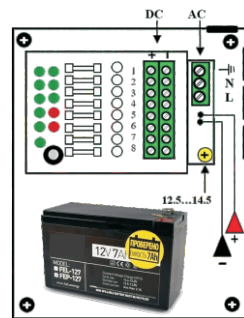

- Power supply of the device and load from external network 220V
- Red - battery charge
green - the battery is charged
- Battery powered load
- Fault (general overload, service required)

Multichannel models have indicators for each channel.

The glow indicates the operating mode of the output.

If the channel indicator is not on - there is a short circuit or overload in this channel, it is disabled.

PREPARATION AND INSTALLATION OF THE DEVICE

Works are carried out in a de-energized state. Connect input power, load and be sure to ground the device. Install and connect the battery according to the polarity. Apply voltage to the input device.

Important: you should use serviceable sealed

lead-acid maintenance-free batteries with a voltage of 12V. For a complete

The battery needs at least 24 hours of continuous charging.

Parameter	ups-1210/8	ups-125/4	ups-125/1
Input voltage	~ 175 ... ~ 245 V	~ 175 ... ~ 245 V	~ 175 ... ~ 245 V
Output voltage	= 12.5... = 14.5 V	= 12.5... = 14.5 V	= 12.5... = 14.5 V
Output current maximum	10 A	5 A	5 A
Output current per channel	1 A	1 A	4 A
Number of output channels	8	4	1
Maximum battery capacity	18Ah	9Ah	9Ah
Battery charge voltage	13.5 ... 14.5 V	13.5 ... 14.5 V	13.5 ... 14.5 V
Battery cut-off voltage	11V	11V	11V
Temperature Range	-20 ... +55 °C	-20 ... +55 °C	-20 ... +55 °C
Working hours	Constant	Constant	Constant
Dimensions	295 * 195 * 90 mm	203 * 165 * 65 mm	203 * 165 * 65 mm
Weight	0.5KG	0.4KG	0.3KG