




Step 1 - Secure the lock cylinder on the outside of the door with tape. This ensures it is held securely in place, making it easier whilst you fit your Glue Smart Lock.

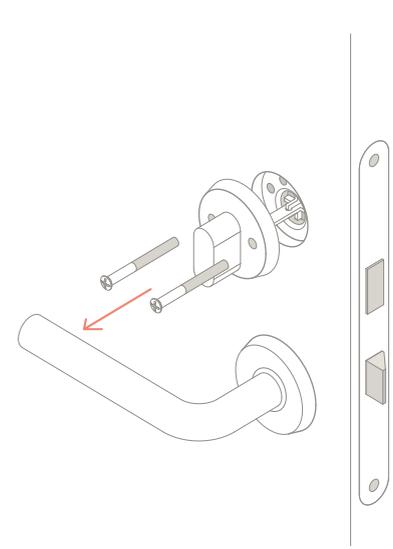


Step 2 - Remove the existing thumb turn by unscrewing the two screws in the thumb turn plate. Keep these screws as you will use them later, if they are long enough.

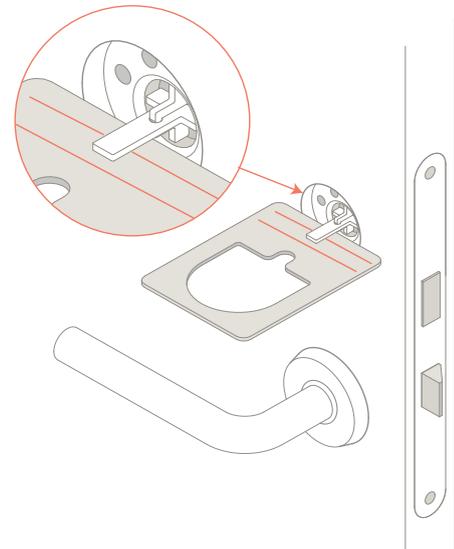


Step 3 - Measure the existing tail piece in your lock. The end should sit between the **MAX** and **MIN** lines in the install template. **If it is the correct length, skip to Step 4.**

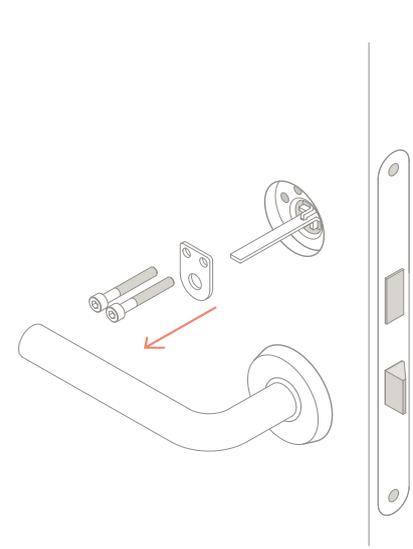


Step 3a - **If the tail piece is too short, or too long,** unscrew the D-plate and carefully remove it. Be careful not to drop the screws inside the door body.

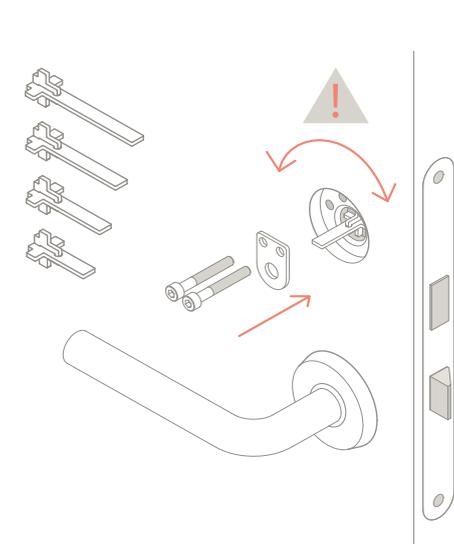


Step 3b - Replace with one of the 4 tail pieces supplied, that fits between the MIN and MAX lines. **DO NOT ROTATE THE LOCK OR TAIL PIECE WHEN FITTING.**

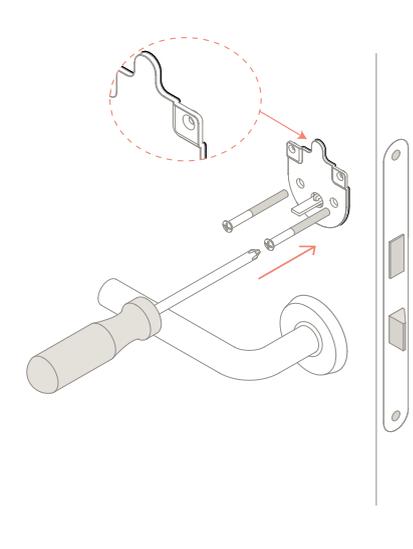


Step 4 - Attach the door plate loosely using the thumb turn screws from Step 2. The rubber side faces the door. If a different length is needed, use the screws supplied.

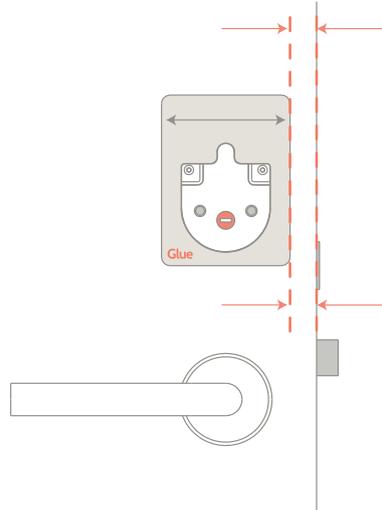


Step 5 - Ensure the door plate is straight by using the Glue Install Template as a guide with the side of the door. Now fully tighten the screws, but do not over tighten.

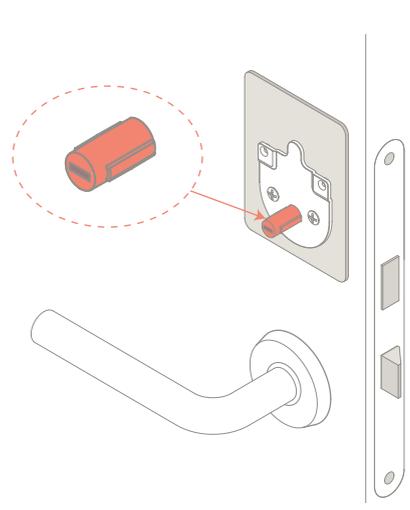


Step 6 - Slide the insert supplied over the tail piece. **DO NOT ROTATE THE TAIL PIECE WHEN FITTING.**

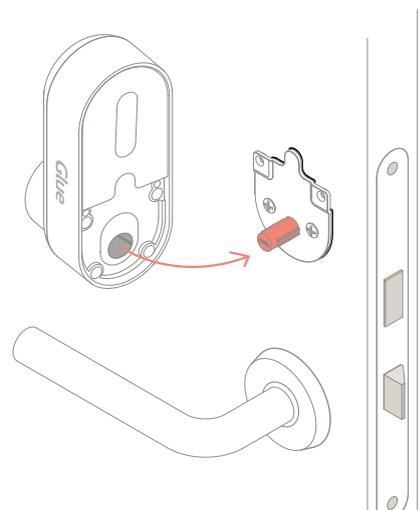

Step 7 - Turn the thumb turn on the Glue Smart Lock to the approximate centre, so the slots inside align with the insert. Then slide the Glue Smart Lock onto the door plate.

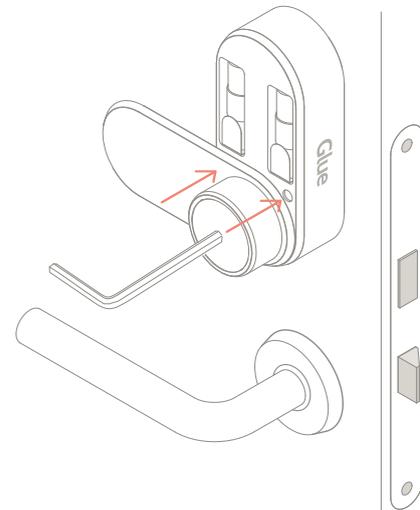

Step 8 - Screw the Glue Smart Lock to the door plate - the screws are located behind the battery cover. Use the L-shaped Hex key supplied.

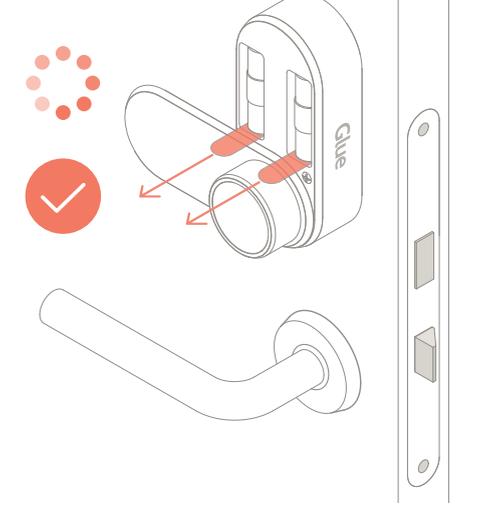

Step 9 - Check the lock is securely fastened to the door plate, If not, check all screws are tightened. Then remove the battery tabs. The light on the front cover will glow.



Step 10 - Your Glue Smart Lock is now ready to calibrate. **Download the app and continue to follow the instructions in "Add a new lock"**